

BM 4", BM 6", BM 8"

BMB 4", BMB 6", BMB 8"

Installation and operating instructions

GB D F I E P GR NL S FIN DK



(GB) Declaration of Conformity

We, Grundfos, declare under our sole responsibility that the products BM 4", BM 6", BM 8", BMB 4", BMB 6" and BMB 8", to which this declaration relates, are in conformity with these Council directives on the approximation of the laws of the EC member states:

- Machinery Directive (2006/42/EC).
Standard used: EN 809: 2009.
- Low Voltage Directive (2006/95/EC).
Standard used: EN 60204-1: 2006.
- EMC Directive (2004/108/EC).
Standards used: EN 61000-6-2: 2005 and EN 61000-6-3: 2007.

(F) Déclaration de Conformité

Nous, Grundfos, déclarons sous notre seule responsabilité, que les produits BM 4", BM 6", BM 8", BMB 4", BMB 6" et BMB 8", auxquels se réfère cette déclaration, sont conformes aux Directives du Conseil concernant le rapprochement des législations des Etats membres CE relatives aux normes énoncées ci-dessous :

- Directive Machines (2006/42/CE).
Norme utilisée : EN 809 : 2009.
- Directive Basse Tension (2006/95/CE).
Norme utilisée : EN 60204-1: 2006.
- Directive Compatibilité Electromagnétique CEM (2004/108/CE).
Normes utilisées : EN 61000-6-2 : 2005 et EN 61000-6-3 : 2007.

(E) Declaración de Conformidad

Nosotros, Grundfos, declaramos bajo nuestra entera responsabilidad que los productos BM 4", BM 6", BM 8", BMB 4", BMB 6" y BMB 8", a los cuales se refiere esta declaración, están conformes con las Directivas del Consejo en la aproximación de las leyes de los Estados Miembros del EM:

- Directiva de Maquinaria (2006/42/CE).
Norma aplicada: EN 809: 2009.
- Directiva de Baja Tensión (2006/95/CE).
Norma aplicada: EN 60204-1: 2006.
- Directiva EMC (2004/108/CE).
Normas aplicadas: EN 61000-6-2: 2005 y EN 61000-6-3: 2007.

(GR) Δήλωση Συμμόρφωσης

Εμείς, η Grundfos, δηλώνουμε με αποκλειστικά δική μας ευθύνη ότι τα προϊόντα BM 4", BM 6", BM 8", BMB 4", BMB 6" και BMB 8" στα οποία αναφέρεται η παρούσα δήλωση, συμμορφώνονται με τις εξής Οδηγίες του Συμβουλίου περί προσέγγισης των νομοθεσιών των κρατών μελών της ΕΕ:

- Οδηγία για μηχανήματα (2006/42/ΕC).
Πρότυπο που χρησιμοποιήθηκε: EN 809: 2009.
- Οδηγία χαμηλής τάσης (2006/95/ΕC).
Πρότυπο που χρησιμοποιήθηκε: EN 60204-1: 2006.
- Οδηγία Ηλεκτρομαγνητικής Συμβατότητας (EMC) (2004/108/ΕC).
Πρότυπα που χρησιμοποιήθηκαν: EN 61000-6-2: 2005 και EN 61000-6-3: 2007.

(S) Försäkran om överensstämmelse

Vi, Grundfos, försäkrar under ansvar att produkterna BM 4", BM 6", BM 8", BMB 4", BMB 6" och BMB 8", som omfattas av denna försäkran, är i överensstämmelse med rådets direktiv om inbördes närmande till EU-medlemsstaternas lagstiftning, avseende:

- Maskindirektivet (2006/42/EG).
Tillämpad standard: EN 809: 2009.
- Lågspänningsdirektivet (2006/95/EG).
Tillämpad standard: EN 60204-1: 2006.
- EMC-direktivet (2004/108/EG).
Tillämpade standarder: EN 61000-6-2: 2005 och EN 61000-6-3: 2007.

(DK) Overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produkterne BM 4", BM 6", BM 8", BMB 4", BMB 6" og BMB 8" som denne erklæring omhandler, er i overensstemmelse med disse af Rådets direktiver om indbyrdes tilnærmelse til EF-medlemsstaternes lovgivning:

- Maskindirektivet (2006/42/EF).
Anvendt standard: EN 809: 2009.
- Lavspændingsdirektivet (2006/95/EF).
Anvendt standard: EN 60204-1: 2006.
- EMC-direktivet (2004/108/EF).
Anvendte standarder: EN 61000-6-2: 2005: 2005 og EN 61000-6-3: 2007.

(D) Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass die Produkte BM 4", BM 6", BM 8", BMB 4", BMB 6" und BMB 8", auf die sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EU-Mitgliedsstaaten übereinstimmen:

- Maschinenrichtlinie (2006/42/EG).
Norm, die verwendet wurde: EN 809: 2009.
- Niederspannungsrichtlinie (2006/95/EG).
Norm, die verwendet wurde: EN 60204-1: 2006.
- EMV-Richtlinie (2004/108/EG).
Normen, die verwendet wurden: EN 61000-6-2: 2005 und EN 61000-6-3: 2007.

(I) Dichiarazione di Conformità

Grundfos dichiara sotto la sua esclusiva responsabilità che i prodotti BM 4", BM 6", BM 8", BMB 4", BMB 6" e BMB 8", ai quali si riferisce questa dichiarazione, sono conformi alle seguenti direttive del Consiglio riguardanti il riavvicinamento delle legislazioni degli Stati membri CE:

- Direttiva Macchine (2006/42/CE).
Norma applicata: EN 809: 2009.
- Direttiva Bassa Tensione (2006/95/CE).
Norma applicata: EN 60204-1: 2006.
- Direttiva EMC (2004/108/CE).
Norme applicate: EN 61000-6-2: 2005 e EN 61000-6-3: 2007.

(P) Declaração de Conformidade

A Grundfos declara sob sua única responsabilidade que os produtos BM 4", BM 6", BM 8", BMB 4", BMB 6" e BMB 8", aos quais diz respeito esta declaração, estão em conformidade com as seguintes Directivas do Conselho sobre a aproximação das legislações dos Estados Membros da CE:

- Directiva Máquinas (2006/42/CE).
Norma utilizada: EN 809: 2009.
- Directiva Baixa Tensão (2006/95/CE).
Norma utilizada: EN 60204-1: 2006.
- Directiva EMC (compatibilidade electromagnética) (2004/108/CE).
Normas utilizadas: EN 61000-6-2: 2005 e EN 61000-6-3: 2007.

(NL) Overeenkomstigheidsverklaring

Wij, Grundfos, verklaren geheel onder eigen verantwoordelijkheid dat de producten BM 4", BM 6", BM 8", BMB 4", BMB 6" en BMB 8" waarop deze verklaring betrekking heeft, in overeenstemming zijn met de Richtlijnen van de Raad in zake de onderlinge aanpassing van de wetgeving van de EG Lidstaten betreffende:


- Machine Richtlijn (2006/42/EC).
Gebuikte norm: EN 809: 2009.
- Laagspannings Richtlijn (2006/95/EC).
Gebuikte norm: EN 60204-1: 2006.
- EMC Richtlijn (2004/108/EC).
Gebuikte normen: EN 61000-6-2: 2005 en EN 61000-6-3: 2007.

(FIN) Vaatimustenmukaisuusvakuutus

Me, Grundfos, vakuutamme omalla vastuullamme, että tuotteet BM 4", BM 6", BM 8", BMB 4", BMB 6" ja BMB 8", joita tämä vakuutus koskee, ovat EY:n jäsenvaltioiden lainsäädännön yhdenmukaistamiseen tähtäävien Euroopan neuvoston direktiivien vaatimusten mukaisia seuraavasti:

- Konedirektiivi (2006/42/EY).
Sovellettu standardi: EN 809: 2009.
- Pienjännitedirektiivi (2006/95/EY).
Sovellettu standardi: EN 60204-1: 2006.
- EMC-direktiivi (2004/108/EY).
Sovellettavat standardit: EN 61000-6-2: 2005: 2005 ja EN 61000-6-3: 2007.

Bjerringbro, 6th May 2010

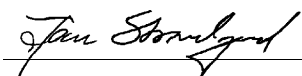

Jan Strandgaard
Technical Director
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Person authorised to compile technical file and empowered to sign the EC declaration of conformity.

BM 4", BM 6", BM 8"

BMB 4", BMB 6", BMB 8"

Installation and operating instructions	4	GB
Montage- und Betriebsanleitung	12	D
Notice d'installation et d'entretien	21	F
Istruzioni di installazione e funzionamento	29	I
Instrucciones de instalación y funcionamiento	37	E
Instruções de instalação e funcionamento	45	P
Οδηγίες εγκατάστασης και λειτουργίας	53	GR
Installatie- en bedieningsinstructies	61	NL
Monterings- och driftsinstruktion	69	S
Asennus- ja käyttöohjeet	77	FIN
Monterings- og driftsinstruktion	85	DK

CONTENTS

	Page
1. General description	4
1.1 Pumped liquids	4
1.2 Sound pressure level	4
2. Delivery, transportation and storage	4
2.1 Frost protection	4
3. Preparation	4
4. Installation	5
4.1 Booster modules connected in series and in parallel	5
5. Pipe connection	6
6. Electrical connection	6
6.1 Frequency converter operation	7
7. Motor protection	7
7.1 Setting of motor starter	7
8. Before starting the booster module(s)	7
9. Operation	8
9.1 Limitations to operation	8
10. Automatic monitoring devices	9
11. Checking of operation	9
12. Fault finding chart	10
13. Manuals	10
14. Checking of motor and cable	11
15. Disposal	11

GB

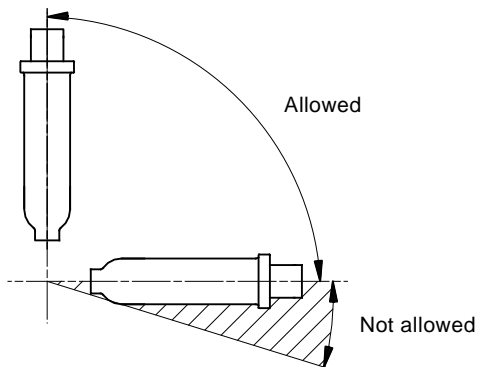


Fig. 1

Note: If the module has been stored for more than one year, the motor liquid must be checked and refilled, if required. Motors of **standard modules** are factory-filled with a Grundfos motor liquid, SML-2, which is frost-proof down to -20°C . Motors of **modules in special version** may be filled with demineralized water, i.e. not frost-proof.

2.1 Frost protection

If the module has to be stored, it must be stored on a frost-free location, or it must be ensured that the motor liquid is frost-proof.

3. Preparation

Before installation, the following checks should be made:

- 1. Check for transport damages**
Make sure that the module has not been damaged during transportation.
- 2. Type of module**
Check that the type designation given on the nameplate fitted to the sleeve corresponds to order.
- 3. Electricity supply**
The motor voltage and frequency are marked on the nameplate. Make sure that the motor is suitable for the electricity supply on which it will be used.
- 4. Liquid in motor**
If a module has been stored for more than one year, check the motor liquid and refill, if required. Contact Grundfos.
If a module is supplied for a special system, the motor may be supplied without liquid or with demineralized water. See section 2. *Delivery, transportation and storage*.

Versions:

BM 4"

Straight version




Bent version



BM 6"

BM 6" is only available in straight version.



TM01 1282 4197

TM00 3793 4698

TM00 3794 4698

TM00 4019 4698



Before beginning installation procedures, these installation and operating instructions should be studied carefully. The installation and operation should also be in accordance with local regulations and accepted codes of good practice.

1. General description

Grundfos BM and BMB booster modules are designed for pressure boosting, liquid transfer and circulation in systems with a high static pressure.

1.1 Pumped liquids

Thin, non-explosive liquids, not containing abrasive particles or fibres. The liquid must not attack the pump materials chemically and mechanically.



The booster modules must not be used for the pumping of inflammable liquids such as diesel oil, petrol or similar liquids.

1.2 Sound pressure level

The sound pressure level of the booster modules BM 4", BM 6", BMB 4" and BMB 6" is lower than 70 dB(A).

The sound pressure level of the booster modules BM 8" and BMB 8" is lower than 80 dB(A).

2. Delivery, transportation and storage

Delivery:

The booster modules are supplied from the factory in proper packing in which they should remain until they are to be installed. The modules are ready for installation.


Transportation and storage:

During transportation and storage, the booster modules may only be placed in the positions shown in fig. 1.

Before storage, the booster modules should be flushed through with clean freshwater, see section 9.1.2 *Flushing of the booster module*.

BM 8"

BM 8" is only available in straight version.

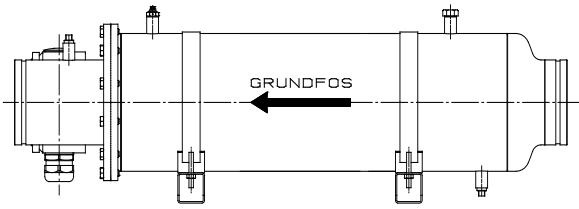

TM01 1420 4698

BMB 4"

Straight version



TM01 9711 3800


Bent version



TM01 9712 3800

BMB 6"

BMB 6" is only available in straight version.

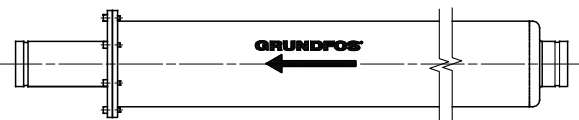

TM01 9713 2700

BMB 8"

BMB 8" is only available in straight version.



TM01 9714 2700

Fig. 2

4. Installation

Grundfos booster modules are supplied as standard without built-in non-return valve, but they are available with non-return valve. For the application of a non-return valve, see fig. 6.

In systems involving the risk of water hammer in connection with start/stop, the necessary measures must be taken to reduce this risk.

The booster modules are suitable for both vertical and horizontal installation, however, the discharge port **should never** fall below the horizontal plane, see fig. 3.

An arrow on the module sleeve shows the direction of flow of liquid through the module, see fig. 2.

The module is fastened by means of clamps, see fig. 4.



Note that the module has an uneven weight distribution. Because of the motor, the largest weight will be in the first third of the sleeve (when seen from the suction port).

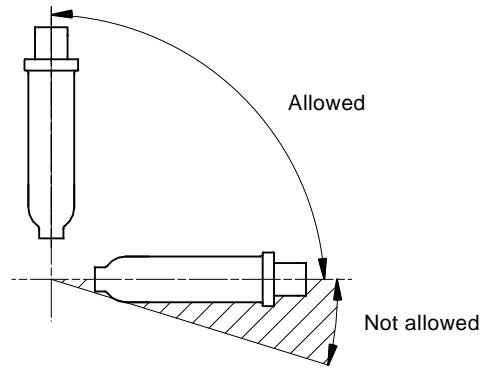


Fig. 3

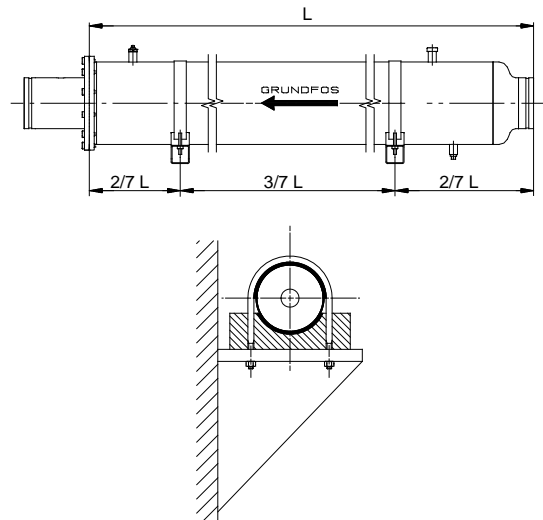


Fig. 4

4.1 Booster modules connected in series and in parallel

- For modules connected in series, mounted above each other, it is recommended to connect the pipes as shown in fig. 5.
- For modules connected in parallel, mounted above each other, it is recommended to connect the pipes as shown in fig. 6. This layout ensures that the modules are filled with water before starting.
- When modules are connected in series and parallel, mounted above each other, it is recommended to connect the pipes as shown in fig. 7.
- For modules connected in series and fitted with a bypass, mounted above each other, it is recommended to connect the pipes as shown in fig. 8.

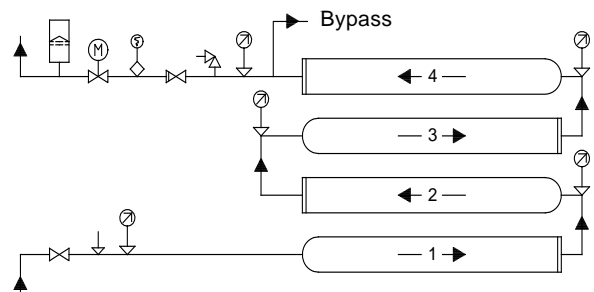


Fig. 5 Booster system with four modules connected in series, mounted above each other.

TM01 1282 4197

TM02 5911 4002 / TM00 4041 4197

TM00 3760 1902

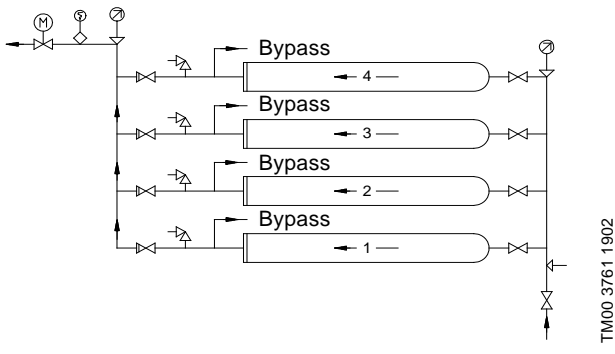


Fig. 6 Booster system with four modules connected in parallel, mounted above each other.

TM00 3761 1902


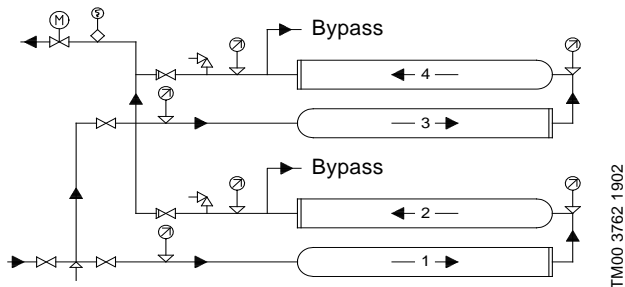


Fig. 7 Booster system with two modules connected in series and in parallel, mounted above each other.

TM00 3762 1902

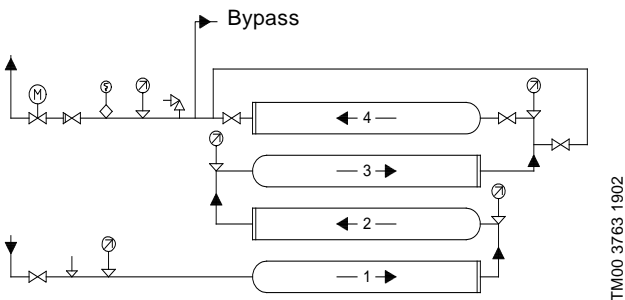

TM00 3763 1902

- = Air escape valve
- = Isolating valve
- = Non-return valve
- = Pressure switch
- = Flow switch
- = Pressure gauge
- = Motor-operated valve
- = Diaphragm tank

Fig. 8 Booster system with four modules connected in series with bypass, mounted above each other.

Note: As venting problems may arise in such installations, it is advisable to install suitable air vent devices.

5. Pipe connection

The booster modules are fitted with clamp liners for Victaulic/PJE clamp couplings on the suction and discharge sides, see fig. 9.

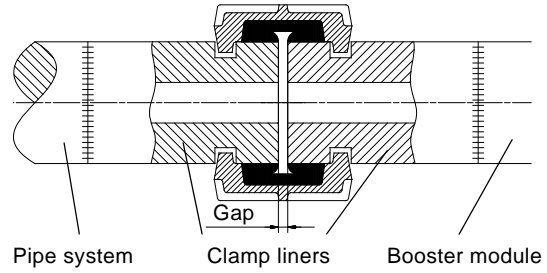


Fig. 9

TM01 1066 3597

Size	Type	Victaulic coupling	Gap [mm]
BM 4"	BM 3A - BM 8A	1 1/4" ø42 mm	1
BM 6"	BM 17 - BM 60	3" ø89 mm	3
BM 8"	BM 30 - BM 46	3" ø89 mm	3
BM 8"	BM 60	4" ø114 mm	6
BM 8"	BM 77 - BM 95	5" ø139 mm	6
BM 8"	BM 125	6" ø168 mm	6
BMB 4"	BMB 3A - BMB 8A	1 1/4" ø42 mm	1
BMB 6"	BMB 17 - BMB 60	3" ø89 mm	3
BMB 8"	BMB 30 - BMB 46	3" ø89 mm	3
BMB 8"	BMB 60	4" ø114 mm	6
BMB 8"	BMB 77 - BMB 95	5" ø139 mm	6
BMB 8"	BMB 125	6" ø168 mm	6

6. Electrical connection

The electrical connection should be carried out by an authorized electrician in accordance with local regulations.



Before making any electrical connections, make sure that the electricity supply has been switched off and that it cannot be accidentally switched on.


The booster modules must be connected to an external mains switch.

The pump must be earthed.

The required voltage quality measured at the module terminals is -10%/+6% of the nominal voltage during continuous operation (including variation in the supply voltage and losses in cables).

It must be checked that there is voltage symmetry in the electricity supply lines, i.e. approximately same difference of voltage between the individual phases. See also section 14. *Checking of motor and cable*, point 1.

In order that the modules meet the EC EMC Directive (89/336/EEC), a 0.47 µF capacitor (in accordance with IEC 384-14) must always be connected over the two phases to which the temperature transmitter is connected, see fig. 10.

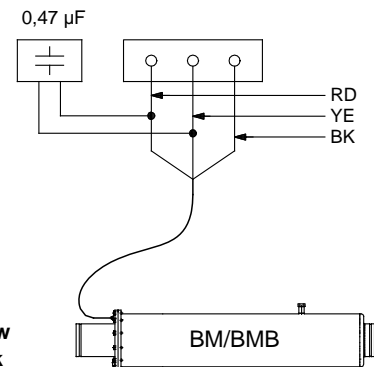

- RD = Red
- YE = Yellow
- BK = Black

Fig. 10

TM02 5255 2402

The electrical connections must be made close to the flange (fig. 11), either by means of a terminal box (figs. 12 and 13) or a cable termination kit.

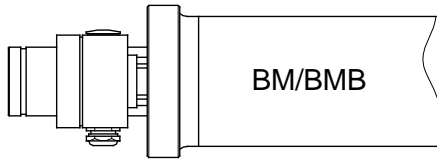


Fig. 11

**BM 4", BM 6", BM 8",
BMB 4", BMB 6" and BMB 8"**
Direct-on-line

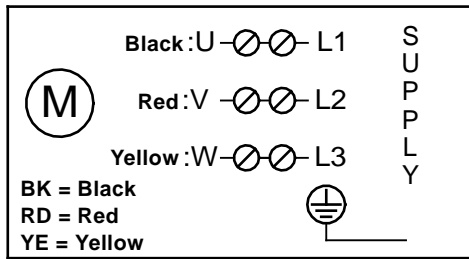


Fig. 12

BM 6", BM 8", BMB 6" and BMB 8"
Star-delta starting

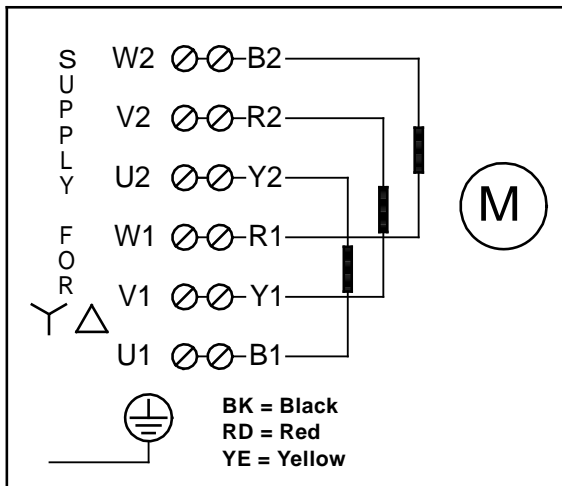


Fig. 13

6.1 Frequency converter operation

Grundfos motors:

Three-phase Grundfos MS motors can be connected to a frequency converter.

If a frequency converter is to be used for booster modules connected in series, it must be connected to the last module in the flow direction.

Note: If a Grundfos MS motor with a temperature transmitter is connected to a frequency converter, a fuse incorporated in the transmitter will melt and the transmitter will be inactive. The transmitter cannot be reactivated. This means that the motor will operate like a motor without a temperature transmitter.

During frequency converter operation, it is not advisable to run the motor at a frequency higher than the nominal frequency (50 or 60 Hz). In connection with pump operation, it is important never to reduce the frequency (and consequently the speed) to such a level that the necessary flow of cooling liquid past the motor is no longer ensured.

The permissible frequency ranges are 30-50 Hz and 30-60 Hz, respectively.

During start, the maximum acceleration time from 0 to 30 Hz is 1 second.

During stop, the maximum deceleration time from 30 to 0 Hz is 1 second.

Depending on the frequency converter type, it may expose the motor to detrimental voltage peaks.

The above disturbance can be abated by installing an RC filter between the frequency converter and the motor.

Possible increased acoustic noise from the motor can be abated by installing an LC filter which will also eliminate voltage peaks from the frequency converter.

For further details, please contact your frequency converter supplier or Grundfos.

7. Motor protection

The booster module must be connected to an effective motor starter which must protect the motor against damage from voltage drop, phase failure, overload and a locked rotor.

In electricity supply systems where undervoltage and variations in phase symmetry may occur, a phase failure relay should also be fitted, see section 14. *Checking of motor and cable.*

The control circuit must always be made in such a way that all modules are stopped if one module fails.

7.1 Setting of motor starter

For cold motors, the tripping time for the motor starter must be less than 10 seconds (Class 10) at 5 times the rated full-load current ($I_{1/1}/I_{SFA}$) of the module, see the module nameplate.

Note: If this requirement is not met, the motor warranty will be invalidated.

In order to ensure the optimum protection of the submersible motor, the starter overload unit should be set in accordance with the following guidelines:

1. Set the starter overload to the rated full-load current ($I_{1/1}/I_{SFA}$) of the module.
2. Start the module and let it run for half an hour at normal performance, see section 8. *Before starting the booster module(s).*
3. Slowly grade down the scale indicator until the motor trip point is reached.
4. Increase the overload setting by 5%.

The highest permissible setting is the rated full-load current ($I_{1/1}/I_{SFA}$) of the module.

For modules wound for star-delta starting, the starter overload unit should be set as above, but the maximum setting should be as follows:

Starter overload setting = Rated full-load current \times 0.58.

The highest permissible start-up time for star-delta starting is 2 seconds.

8. Before starting the booster module(s)

The booster module(s) must be filled with water before start-up.

Procedure:

1. Slacken the vent valve of the booster module, if any.
2. Ensure an inlet pressure on the booster module.
3. Completely open the isolating valve.
4. Wait 3 to 5 minutes to ensure optimum venting.
5. Tighten the vent valve.

Checking the direction of rotation:

Procedure:

1. Close the isolating valve on the discharge side of module 1 (figs. 5 to 8) to approx. 1/3 of maximum flow.
2. Start module 1 and record discharge pressure and flow readings.
3. Stop the module and interchange two of the phases to the module.
4. Restart the module and re-record discharge pressure and flow readings.
5. Stop the module.
6. Compare the results taken under points 2 and 4. The connection which gave the larger pressure and flow is the correct direction of rotation.

TM02 02 5256 2402

TM00 4035 1694

TM00 4034 3197

The check for the direction of rotation should last for the shortest possible time.

If the booster system has several modules, starting and rotation checks are made in the order 1-2-3-4 until all modules are running. When module 2 is checked, module 1 must be running. When module 3 is checked, modules 1 and 2 must be running, etc.

If modules in series are also connected in parallel (fig. 7), the direction of rotation of each section connected in series should be checked.

After having checked the direction of rotation, stop the modules in the order 4-3-2-1.

The booster system is now ready for operation.

9. Operation

Start:

The booster modules are not allowed to run against a closed discharge valve for more than 5 seconds as this will cause an increase in temperature/formation of steam in the module which may cause damage to the pump and the motor.



If there is any danger of the modules running against a closed discharge valve, a minimum liquid flow through the module should be ensured by connecting a bypass/a drain to the discharge side of the module. The drain can for instance be connected to a tank.

The booster modules must be started in the order 1-2-3-4 at intervals of 1 or 2 seconds, see section 4.1 *Booster modules connected in series and in parallel*. If other intervals are required, contact Grundfos.

Module 1 is always the first module on the suction side.

During start-up, it is recommended to close the isolating valve ¾ and open it slowly (2 to 3 seconds).

In systems involving the risk of water hammer in connection with start/stop, the necessary measures must be taken to reduce this risk, e.g. by installing a diaphragm tank.

Operation:

During operation, the inlet pressure must be checked in accordance with section 9.1 *Limitations to operation*.

The total pressure and flow of modules connected in series should never be changed by stopping one or more of the modules. If different pressures or flows are required, the following procedures are applicable:

1. Bypass of module(s): Install a bypass between two modules, see fig. 8.
Stop the module(s) which is/are not required and close the isolating valves on either side of the module.
See section 9.1.2 *Flushing of the booster module*.
The module(s) to be bypassed is/are always the last module(s) in the flow direction.
2. Fit a reducing valve to the discharge pipe.
The values stated in section 9.1 *Limitations to operation* must be observed.
3. Modules with three-phase motors: Install a frequency converter for speed control of the last booster module in the flow direction, see section 6.1 *Frequency converter operation*.

Stop:

The modules must be stopped in reverse order, i.e. 4-3-2-1, at intervals of 1 to 2 seconds, see section 4.1 *Booster modules connected in series and in parallel*.

If the booster system is taken out of operation for a long period, the modules should be flushed through with clean freshwater, see section 9.1.2 *Flushing of the booster module*. The modules are then left with freshwater until they are to be used again.

9.1 Limitations to operation

The flow limits stated in the following table apply to the optimum operating ranges of the modules as regards efficiency:

Type	Recommended flows at 25°C (77°F)			
	m³/h		US GPM	
	50 Hz	60 Hz	50 Hz	60 Hz
BM 3A/BMB 3A	0.8-4.4	1.0-5.4	3.5-17.6	4.4-23.8
BM 5A/BMB 5A	2.5-6.8	3.0-8.4	11-30	13-37
BM 8A/BMB 8A	4.0-10	4.8-10	17.6-40	21-40
BM 17/BMB 17	8.0-24	8.0-29	35-106	35-128
BM 30/BMB 30	15-38	18-45	66-167	79-198
BM 46/BMB 46	24-60	28-72	106-264	123-317
BM 60/BMB 60	35-75	40-90	154-330	176-396
BM 77/BMB 77	40-100	48-120	176-440	211-528
BM 95/BMB 95	50-120	60-140	220-528	264-616
BM 125/BMB 125	70-160	80-180	308-704	352-792

The relative pressure limits stated in the following table must be observed:

Size	Permissible relative pressures ¹⁾					
	Inlet pressure			Outlet pressure		
	Min.		Max. ²⁾		Max. ²⁾	
	[bar]	[p.s.i.]	[bar]	[p.s.i.]	[bar]	[p.s.i.]
BM 4"	0.5	7.25	60	870	80	1160
BM 6"	0.5	7.25	50	725	80	1160
BM 8"	1	14.5	25	362	70	1015
BMB 4"	0.5	7.25	30	435	60	870
BMB 6"	0.5	7.25	20	290	50	725
BMB 8"	1	14.5	10	145	45	653

1) Contact Grundfos if higher pressures are required.

2) **Note:** If the maximum inlet/outlet pressure is exceeded, install a safety valve.

9.1.1 Cooling

The temperature and flow limits stated in the following table must be observed to ensure sufficient cooling of the motor:

Motor	Maximum permissible liquid temperature			
	Maximum liquid temperature		Minimum flow velocity past the motor	
	°C	°F	m/s (ft/s)	m³/h (US GPM)
Grundfos 4"	40	104	≥ 0.15 (0.49)	≥ 0.8 (3.5)
Grundfos 6"	40	104	≥ 0.15 (0.49)	≥ 5.5 (24)
FRANKLIN 8"	30	86	≥ 0.16 (0.52)	≥ 18.5 (81.5)

9.1.2 Flushing of the booster module

When a module is flushed, the flow must be reduced to maximum 10% of the nominal flow at a minimum pressure of 2 bar. The modules must be stopped while the system is flushed, see section 9. *Operation*.

Note: When pumping water with a salt concentration > 2000 ppm NaCl, the module must be flushed through in the flow direction as described below.

The flushing procedure depends on the operating condition:

- **Intermittent operation:**
If the module has to be stopped for more than 30 minutes, it must be flushed through with clean freshwater.
- **Continuous operation:**
Once every 24 hours, the module should be stopped and flushed through with raw water by means of the feed pump.

9.1.3 Frequency of starts and stops

Minimum 1 per year is recommended.

Maximum 20 per hour.

Maximum 100 per day.

Note: BM/BMB 8": Maximum 10 per day.

10. Automatic monitoring devices

To protect the modules against dry running and to ensure a minimum flow of cooling water past the motors, the system must be fitted with flow and pressure monitoring devices (figs. 5 to 8).

A pressure switch on the suction side is dimensioned in accordance with the estimated inlet pressure. At a pressure lower than 0.5 bar for BM 4", BM 6", BMB 4" and BMB 6" and 1 bar for BM 8" and BMB 8", an alarm is given and the module must be stopped without delay.

All discharge connections to the system should be fitted with flow switches which will stop the system at the set minimum flows.

The above monitoring devices ensure a correct inlet pressure and a minimum flow of cooling water past the motor.

If the modules are stopped automatically, automatic flushing is recommended, see section 9.1.2 *Flushing of the booster module*.

11. Checking of operation

Depending on the number of operating hours of the modules, the following should be checked at suitable intervals:

- Flow.
- Starting frequency.
- Control and protective devices.
- Liquid temperature.
- Minimum flow through modules during operation.

If any of the above checks reveal any abnormal operating details, inspection should be carried out in accordance with the fault finding chart.

It is recommended to use the log book at the end of these instructions.

12. Fault finding chart



Before removing the terminal box cover and before any removal/dismantling of the module, make sure that the electricity supply has been switched off and that it cannot be accidentally switched on.

Fault	Cause	Remedy
1. The booster system stops occasionally. One or more modules stop.	a) No or insufficient water supply. The pressure switch has cut out.	Check that the pressure switch functions normally (without delay) and is adjusted correctly. Check that the minimum inlet pressure is correct.
	b) The capacity is too small. The flow switch has cut out.	The discharge pipe is totally or partly blocked due to incorrectly adjusted manually operated valve, or failure in the magnetic or motor-operated valve. Check these valves. The flow switch is faulty or incorrectly adjusted. Check/adjust the switch.
2. The booster system does not run.	a) The fuses are blown.	Check and replace both main fuses and/or fuses for control circuit.
	b) The motor starter overload unit has tripped out.	Reset the starter overload. If it trips out again, the voltage should be checked.
	c) The magnetic coil of motor starter/contacto- r is short-circuited (not cutting in).	Replace the coil. Check the coil voltage.
	d) The control circuit has cut out or is defective.	Check the control circuit and the contacts in the monitoring devices (pressure switch, flow switch, etc.).
	e) The motor/supply cable is defective.	Check motor and cable. See also section 14. <i>Checking of motor and cable.</i>
3. The booster system runs, but gives no water or develops no pressure.	a) No water or too small quantity delivered to the modules or air in the system.	Check that the inlet pressure during operation is at least 0.5 bar for BM 4", BM 6", BMB 4" and BMB 6" and 1 bar for BM 8" and BMB 8". If so, the water supply is OK. Stop and vent the system. Restart the system as described in section 9. <i>Operation.</i> If the module is defective, it should be dismantled and repaired/replaced.
	b) Suction parts are blocked.	Pull the pump out of the sleeve and clean the suction parts.
4. The booster system runs at reduced capacity (flow and pressure).	a) Wrong direction of rotation.	See section 8. <i>Before starting the booster module(s).</i>
	b) The valves on the discharge side are partly closed or blocked.	Check valves.
	c) The discharge pipe is partly blocked by impurities.	Measure the discharge pressure and compare with the calculated data. Clean or replace the discharge pipe.
	d) The module is partly blocked by impurities.	Pull the pump out of the sleeve. Dismantle, clean and check the pump. Any defective parts should be replaced. Clean the pipes.
	e) The module is defective.	Pull the pump out of the sleeve. Dismantle, clean and check the pump. Any defective parts should be replaced. See section 13. <i>Manuals.</i>

13. Manuals

For the replacement and repair of parts of the booster system, please refer to:





Related documentation

Service Manual for Replacement of Motor Cable and Motor (4", 6" and 8").

Parts Lists with instructions for dismantling and assembly of pump and motor.

www.grundfos.com/xxx

14. Checking of motor and cable

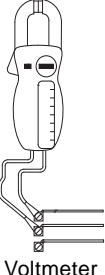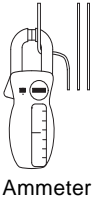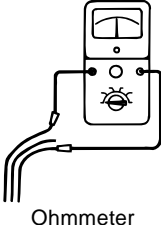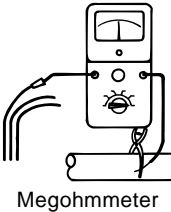1. Supply voltage	<p>Measure the voltage between the phases by means of a voltmeter. Connect the voltmeter to the terminals in the motor starter.</p>	<p>The voltage should, when the motor is loaded, be within $-10\%/+6\%$ of the rated voltage. The motor may burn if there are larger variations in voltage.</p> <p>If the voltage is constantly too high or too low, the motor must be replaced by one corresponding to the supply voltage. Large variations in voltage indicate poor electricity supply, and the module should be stopped until the defect has been found. Resetting of the motor starter may be necessary.</p>
 <p>Voltmeter</p>	TM00 1371 5092	
2. Current consumption	<p>Measure the current of each phase while the module is operating at a constant discharge pressure (if possible at the capacity where the motor is most heavily loaded). For normal operating current, see nameplate.</p>	<p>Calculate the current unbalance (%) in the three phases as follows:</p> <ol style="list-style-type: none"> 1. Add up the three phase currents. 2. Divide this value by three to ascertain the average current. 3. Find the phase current differing most from the average current. 4. Compare the results from points 2 and 3. 5. Divide the difference by the average value and multiply by 100. The result is the current unbalance in %. <p>For three-phase motors, the current unbalance must not exceed 5%. If so, or if the current exceeds the maximum operating current, there are the following possible faults:</p> <ul style="list-style-type: none"> • The contacts of the motor starter are burnt. Replace the contacts. • Poor connection in leads, possibly in terminal box. • Too high or too low supply voltage, see point 1. • The motor windings are short-circuited or partly disjointed, see point 3. • Damaged pump is causing the motor to be overloaded. Pull the pump out of the sleeve for overhaul. • The resistance value of the motor windings deviates too much. Move the phases in phase order to a more uniform load. If this does not help, see point 3.
 <p>Ammeter</p>	TM00 1372 5092	
Items 3 and 4: Measurement not needed if supply voltage and current consumption are normal.		
3. Winding resistance	<p>Remove the phase leads from the terminal box. Measure the winding resistance as shown on the drawing.</p>	<p>The highest value must not exceed the lowest value by more than 10%. If the deviation is higher, the pump should be pulled out. Measure motor and cable separately and replace or repair defective parts. See section 13. <i>Manuals</i>.</p>
 <p>Ohmmeter</p>	TM00 1373 5092	
4. Insulation resistance	<p>Remove the phase leads from the terminal box. Measure the insulation resistance from each phase to earth (frame). (Make sure that the earth connection is made carefully.)</p>	<p>If the measured insulation resistance is less than 0.5 megohms and the supply cable is OK, the pump should be pulled out for motor or cable repair or replacement. See section 13. <i>Manuals</i>.</p>
 <p>Megohmmeter</p>	TM00 1374 5092	

15. Disposal

Disposal of this product or parts of it must be carried out according to the following guidelines:

1. Use the local public or private waste collection service.
2. In case such waste collection service does not exist or cannot handle the materials used in the product, please deliver the product or any hazardous materials from it to your nearest Grundfos company or service workshop.

Subject to alterations.

System sketch

Argentina
Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Lote 34A
1619 - Garin
Pcia. de Buenos Aires
Phone: +54-3327 414 444
Telefax: +54-3327 411 111

Australia
GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria
GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium
N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belorussia
Представительство ГРУНДФОС в Минске
220123, Минск,
ул. В. Хоружей, 22, оф. 1105
Тел.: +(37517) 233 97 65,
Факс: +(37517) 233 97 69
E-mail: grundfos_minsk@mail.ru

Bosnia/Herzegovina
GRUNDFOS Sarajevo
Trg Heroja 16,
BiH-71000 Sarajevo
Phone: +387 33 713 290
Telefax: +387 33 659 079
e-mail: grundfos@bih.net.ba

Brazil
BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria
GRUNDFOS Pumpen Vertrieb Representative Office - Bulgaria
Bulgaria, 1421 Sofia
Lozenetz District
105-107 Arsenalski blvd.
Phone: +359 2963 3820, 2963 5653
Telefax: +359 2963 1305

Canada
GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China
GRUNDFOS Pumps (Shanghai) Co. Ltd.
51 Floor, Raffles City
No. 268 Xi Zang Road. (M)
Shanghai 200001
PRC
Phone: +86-021-612 252 22
Telefax: +86-021-612 253 33

Croatia
GRUNDFOS CROATIA d.o.o.
Cebini 37, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.grundfos.hr

Czech Republic
GRUNDFOS s.r.o.
Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111
Telefax: +420-585-716 299

Denmark
GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia
GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland
OY GRUNDFOS Pumput AB
Mestarintie 11
FIN-01730 Vantaa
Phone: +358-3066 5650
Telefax: +358-3066 56550

France
Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany
GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece
GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong
GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary
GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India
GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraipakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia
PT GRUNDFOS Pompa
Jl. Rawa Sumur III, Blok III / CC-1
Kawasan Industri, Pulogadung
Jakarta 13930
Phone: +62-21-460 6909
Telefax: +62-21-460 6910 / 460 6901

Ireland
GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy
GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan
GRUNDFOS Pumps K.K.
Gotanda Metalion Bldg., 5F,
5-21-15, Higashi-gotanda
Shiagawa-ku, Tokyo
141-0022 Japan
Phone: +81 35 448 1391
Telefax: +81 35 448 9619

Korea
GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia
SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035,
Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania
GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia
GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

México
Bombas GRUNDFOS de México S.A. de C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands
GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
e-mail: info_gnl@grundfos.com

New Zealand
GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway
GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland
GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal
Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

România
GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia
ООО Грундфос
Россия, 109544 Москва, ул.
Школьная 39
Тел. (+7) 495 737 30 00, 564 88 00
Факс (+7) 495 737 75 36, 564 88 11
E-mail
grundfos.moscow@grundfos.com

Serbia
GRUNDFOS Predstavništvo Beograd
Dr. Milutina Ivkovića 2a/29
YU-11000 Beograd
Phone: +381 11 26 47 877 / 11 26 47 496
Telefax: +381 11 26 48 340

Singapore
GRUNDFOS (Singapore) Pte. Ltd.
24 Tuas West Road
Jurong Town
Singapore 638381
Phone: +65-6865 1222
Telefax: +65-6861 8402

Slovenia
GRUNDFOS d.o.o.
Šlandrova 8b, SI-1231 Ljubljana-
Črnuče
Phone: +386 1 568 0610
Telefax: +386 1 568 0619
E-mail: slovenia@grundfos.si

Spain
Bombas GRUNDFOS España S.A.
Camino de la Fuentequilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden
GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46(0)771-32 23 00
Telefax: +46(0)31-331 94 60

Switzerland
GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-1-806 8111
Telefax: +41-1-806 8115

Taiwan
GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand
GRUNDFOS (Thailand) Ltd.
92 Chaloen Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey
GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
Ihsan dede Caddesi,
2. yol 200, Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine
ТОВ ГРУНДФОС УКРАЇНА
01010 Київ, Вул. Московська 86,
Тел.: (+38 044) 390 40 50
Факс.: (+38 044) 390 40 59
E-mail: ukraine@grundfos.com

United Arab Emirates
GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971-4- 8815 166
Telefax: +971-4-8815 136

United Kingdom
GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 8TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.
GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Usbekistan
Представительство ГРУНДФОС в Ташкенте
700000 Ташкент ул.Усмана Носира
1-й
тулик 5
Телефон: (3712) 55-68-15
Факс: (3712) 53-36-35

150095 0510	30
Repl. 150095 0804	

The name Grundfos, the Grundfos logo, and the payoff Be–Think–Innovate are registered trademarks owned by Grundfos Management A/S or Grundfos A/S, Denmark. All rights reserved worldwide.